

Single Desk

Assembly & User Instructions

Contents

Standing
just **15 min** per hour
provides great
health benefits

Use/Liability	3
Parts List/Tools	4
Assembly	5-8
Trouble Shooting	9
Specifications	9

Assembly



Make sure no obstacles are in the desk's path.
Make sure the desktop is not touching any walls.
Make sure all cords are appropriate length to accommodate the change in height.



WARNING
Pinch Point
Keep hands and fingers clear.



Keep children away from electric height-adjustable desks, control units and handsets. There is a risk of injury and electric shock.



Keep all electrical components away from liquids.



Do not sit or stand on the desk frame.
Do not crawl or lie under the desk frame.



Do not place any objects taller than 20" underneath the desk.



Do not open any of the components - the Legs, Control Box, or Switch.
There is a danger of electric shock.



This product is designed with a duty cycle of 10%
(2 min. on, 18 min. off).



In the event of a power outage or if the power cord is unplugged, a manual reset may be necessary - see USE section.



IMPORTANT: You must RESET the desk prior to use.



Use / Liability

This height adjustable desk has electric motors and is designed for use in dry work areas only.

The desk height is adjustable so that it can be positioned at the most ergonomically suitable height.

Any other use is at users risk.

Under no circumstances does the manufacturer accept warranty claims or liability claims for damages caused from improper use or handling of the desk frame.

Please be informed that the anti collision software is designed for furniture protection, not human protection.

Parts List

Tools



4mm Allen Wrench (included)




Phillips Head Screwdriver
and/or Power Drill



Tape Measure

Parts List

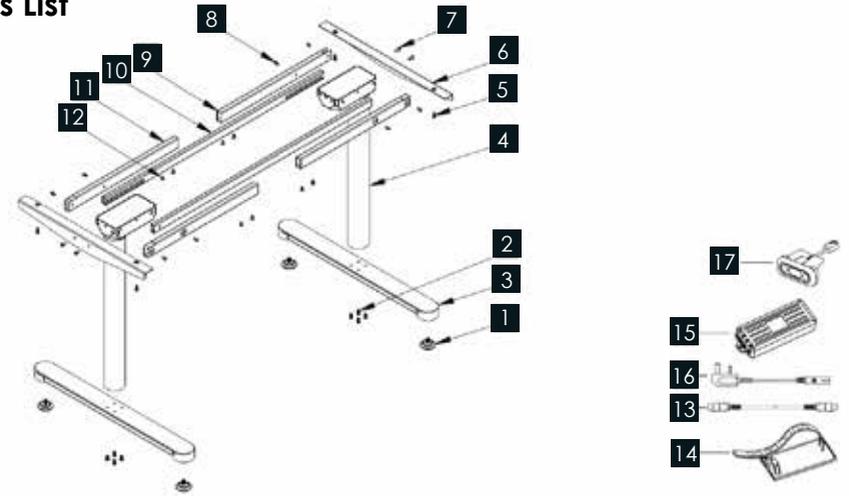

Part	Qty	Part	Qty	Part	Qty
1 Foot glide	4	7 M6x10 flat head socket cap screw	4	13 Cable (1.3m)	1
2 M6x14 hexagon socket button head screw	12	8 M6X10 socket head cap screw	8	14 Cable Clip	10
3 Foot	2	9 Frame Left	2	15 Control Box	1
4 Leg	2	10 Centre Rail	2	16 Power Cord	1
5 ST5x20 Wood Screw	4	11 Frame Right	2	17 Handset	1
6 Side Bracket	2	12 M8x8 set screw	8	18 ST5X16 wood screws	4


Assembly

Ensure there are no obstacles in the desk's path, and that the desktop is not touching any walls. Please also ensure that all cords are an appropriate length to accommodate the change in height.



IMPORTANT: You must RESET the desk prior to use.

- 1 Lay out all components and hardware to ensure that you have all the items listed on the parts page. Fully separate Left Frame (part 9) from Right Frame (part 11). You will find the Centre Rail (part 10) inside.

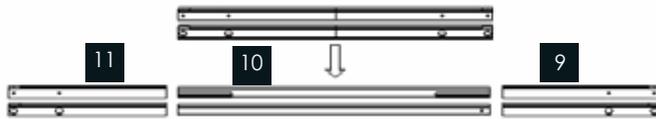


- 2 Attach one of the legs (part 4) to the Frame rights (part 11).

Line up the holes on the Leg (part 4) with the holes on the Frame Right (part 11). Using the supplied Allen Wrench, insert four(4) M6×10 socket head cap screw (part 8) through the holes in the Frame Right (part 11), going into the leg (part 4) and rotate each screw just a few turns.


After all four(4) M6×10 socket head cap screws (part 8) are inserted, tighten all four(4) screws. Do the same for the other Leg (part 4) and Frame Left (part 9).

The holes in the frames must face downward so the centre rails can be screwed in.

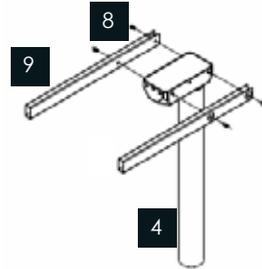


 If you drop a screw inside the frame end, simply tilt to retrieve

- 3 Slide the Side Bracket (part 6) into the Frame Right (part 11). Insert two(2) M6×10 flat head socket cap screws (part 7) through the two(2) holes in the Leg (part 4) going into the inserted Side Bracket (part 6). Using the supplied Allen Wrench, rotate each screw just a few turns. After both M6 x 10 flat head socket cap screws (part 7) are inserted, tighten both screws.
- Do the same for the other Frame and Leg assembly.

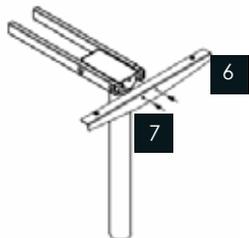


Assembly

- 4 For each leg assembly, attach a Foot (part 3) with four(4) M6×14 hexagon socket button head screw (part 2) and tighten in a cross-pattern. Foot Glides x 4 (part 1) attach to the feet.

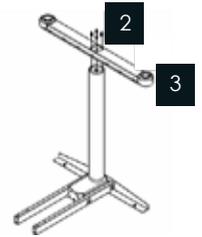


- 5 Slide the two(2) Centre Rails (part 10) into the two Frame Ends (parts 9 & 11) ensuring:
- a) The slots in the Centre Rail (part 10) face inward
 - b) The slots in the Centre Rail (part 10) are closer to the top edge when the assembly is upside down (see inset).

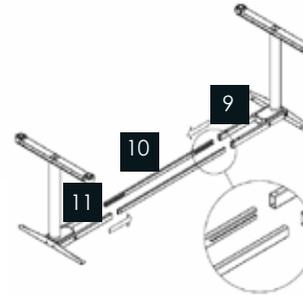


- 6 Check both sides of the desktop before placing the desk base on the underside of the desktop.

Adjust the width of the desk base to the desktop by sliding the two halves outward. We recommend leaving at least ½" (12.7mm) of the desktop width (on each end) protruding beyond the frame width and centering the Side Brackets (part 6) before and after.

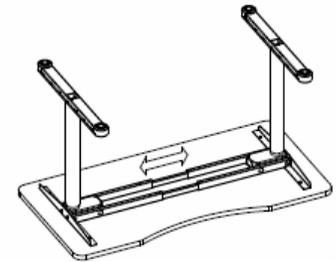


- 7 Lock the position of the Centre Rail (part 10) using eight(8) M8×8 set screws (part 12).

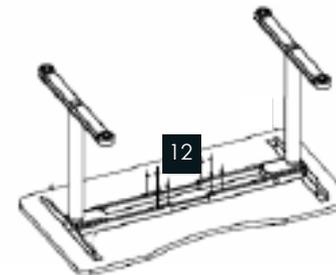

Ensure that the M8×8 set screws (part 12) contact the Centre Rail (part 10) by sliding the Centre Rail (part 10) as needed.

Assembly

8

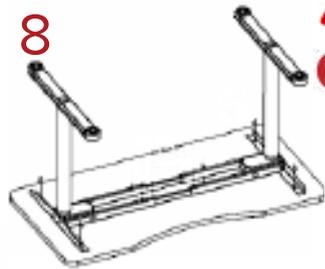

 Double check that the wood screws are not too long for your desktop and won't puncture the surface when screwed all the way in.

 We recommend that you pre-drill any holes needed for fasteners. Never use countersunk screws.

Double-check that the desk base is properly positioned on the underside of the desktop.

If using own top with different drillings attach the desk base to the underside of the desktop using (4) four ST5 x 20 wood screws (part 5). Please note you will have four (4) M6 x 14 hexagon socket button head screws (part 2) spare.


Or

If using pre drilled top attach the desk base to the underside of the desktop using four (4) M6x 14 hexagon socket button head screws (part 2). Please note you will have four (4) ST5 x 20 Wood screws spare.



Attach the Handset (part 17) so the front of the handset is flush with the front desktop edge (or recessed up to 1/8"). The handset may be placed anywhere along the front edge of the desktop, but we recommend placing it towards an end so it prevents interference when seated. Use two(2) ST5x16 wood screws (part 18) to attach the handset to the desktop.

Fix the Control Box (part 15) on the desktop with two(2) ST5x16 wood screws (part 18).

 Do not overtighten screws in this step. Overtightening could cause damage to the components.

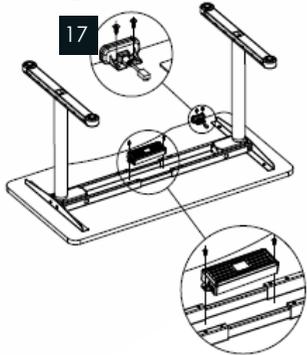

9

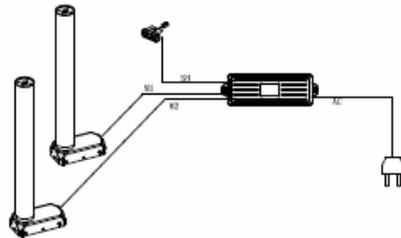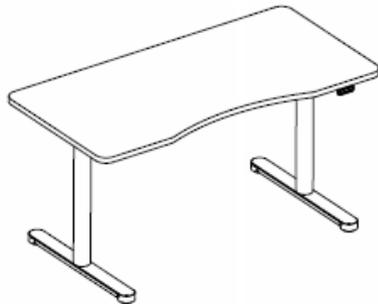

Connect the Handset (part 17) cable to the Control Box (part 15). Connect the Power Cord (part 16) to the Control Box (part 15). Connect the Cable (part 13) to the Leg (part 4) and to the Control Box (part 15). Use the adhesive-backed Cable Clips (part 14) to secure the cables so they do not sag.

Please note you won't need extension cable (Part 13) if you have a small top. To ensure cabling is neat and tidy we recommend purchasing a cable basket.

Assembly

10

Turn the assembled desk right-side up. With at least two people, grab the DESK BASE (not the desktop) and turn the desk right-side up. Adjust the glides on the Feet (part 3) as needed.

11

Plug the Power Cord (part 15) into 230V outlet.

12

RESET PROCEDURE

Press and hold the DOWN button on the Handset (part 17) until the desk reaches its lowest height.

Release the DOWN button.

Press and hold the DOWN button again for about 10 seconds.

Release the DOWN button.

Press and hold the DOWN button again until the desk lowers a little bit more, slightly rises and stops.

Release the DOWN button.

Your desk is now ready to use.

The desk base can be adjusted by pressing and holding either the UP or DOWN button until the desired height is reached.

Child lock - Press up and down button at the same time for five seconds, release them and the handset is locked. When you press them for another five seconds, the handset will unlock.



Ensure there are no obstacles in the desk's path, and that the desktop is not touching any walls. Please also ensure that all cords are an appropriate length to accommodate the change in height.



IMPORTANT: You must RESET the desk prior to use.

Trouble Shooting

If your desk is not functioning properly it may need to be reset. Follow the RESET procedure outlined in the USE section.

If your desk has a handset with an LED readout and it displays "RST" (reset), perform the reset procedure outlined in the USE section.

If the LED readout displays an error message (*Er1* - *Er13*) confirm that all wired connections are secure (legs to cables, cables to control box). Then perform the reset procedure outlined in the USE section.

If the error message persists after the reset procedure, contact your seller.
If the height between the legs exceeds 1.5 inches, stop the reset procedure & contact your seller.

If the handset displays "HOT", let the base cool down for 20 minutes.

Specifications

Height Range	685 - 1245 mm (without desktop)
Base Width	1080mm min. - 1800mm max.
Speed	35mm/s (no load)
Load Capacity	1000N
Duty Cycle	10% Max. 2 mins on, 18 mins off
	Soft start/stop
	4 Memory presents (some models)
	Adjustable leveling studs



Increase productivity
Prolong life expectancy
Improve circulation
Burn fat

Standing just 15 min per hour
provides great health benefits.



